



Click the insert tab then the load family ribbon.

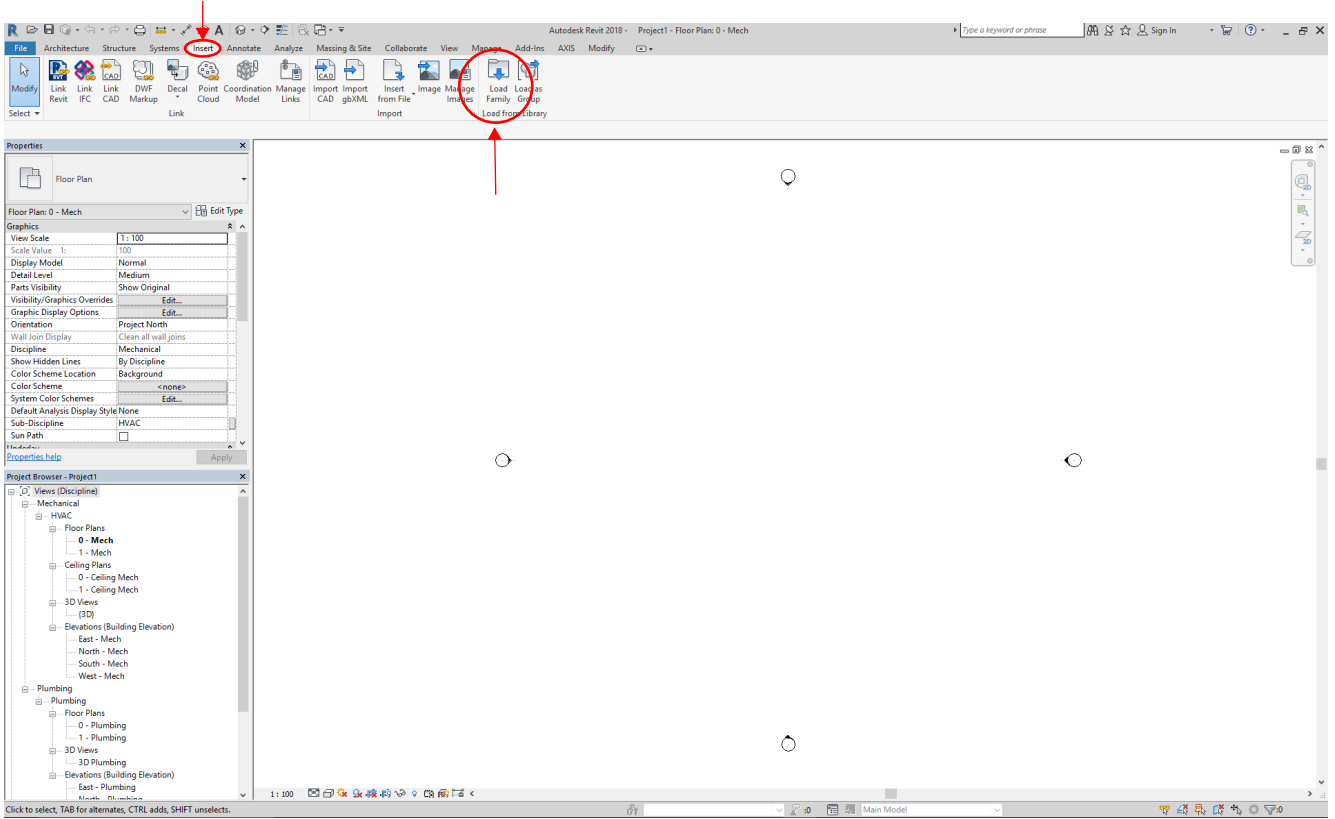


Choose relevant family file

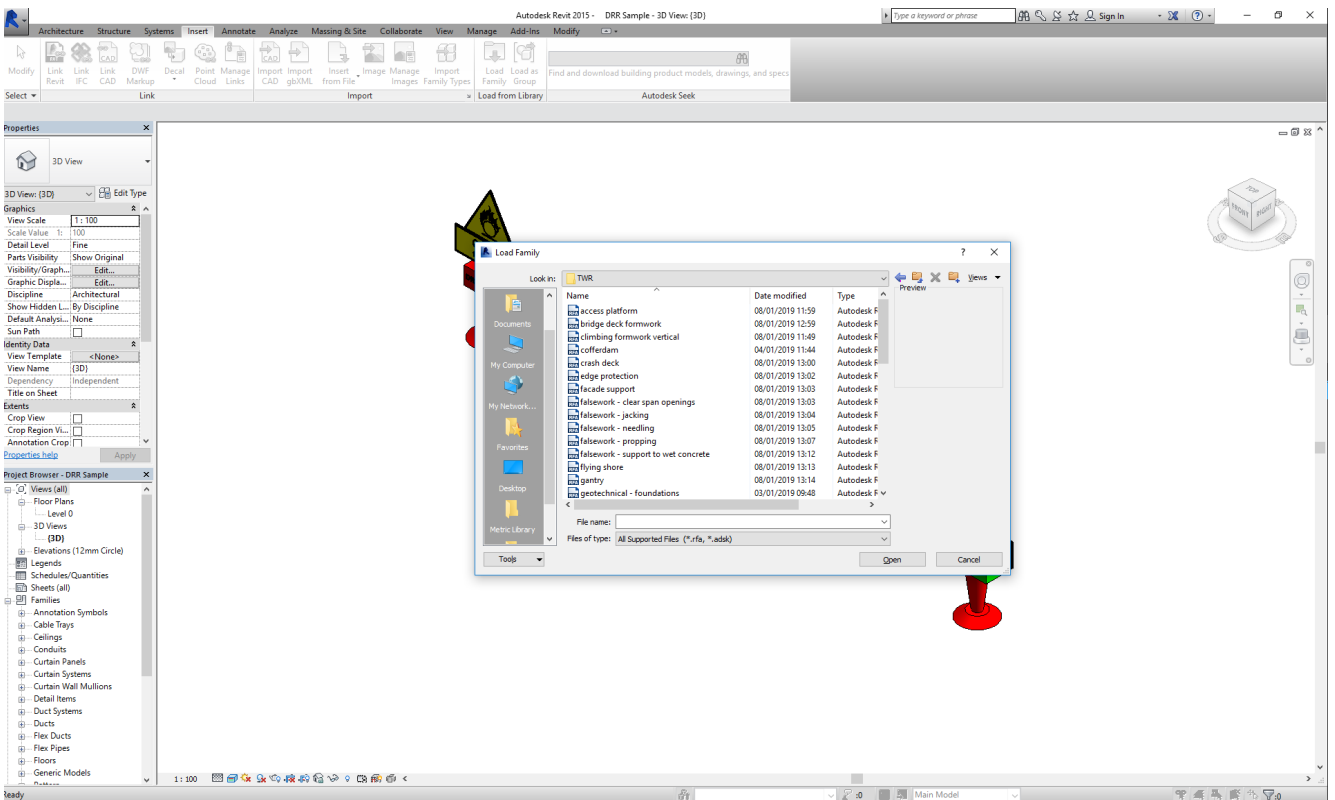


The selected family is now loaded into Revit

Click the systems tab then the relevant category for the loaded family.

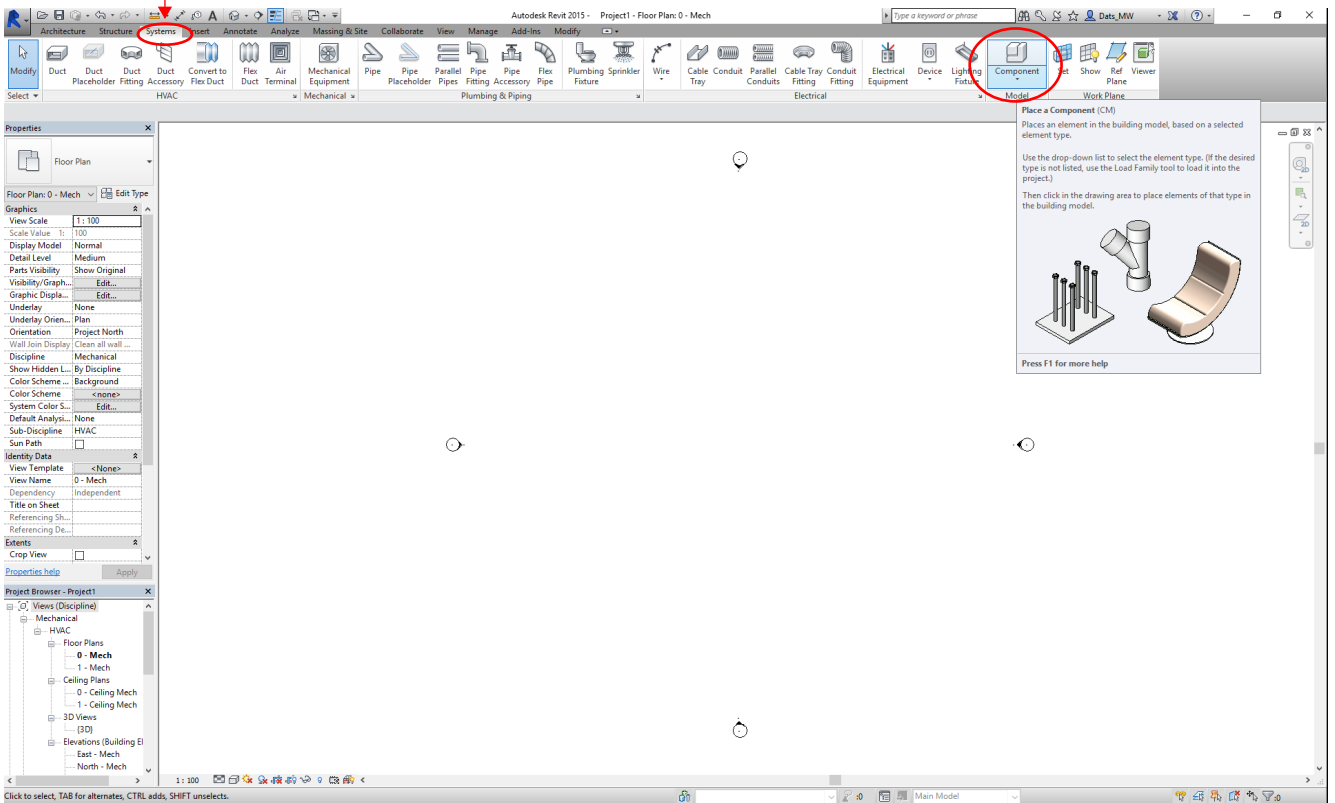

By clicking edit type you can add in the relevant TWR/DDR/RAMS url's

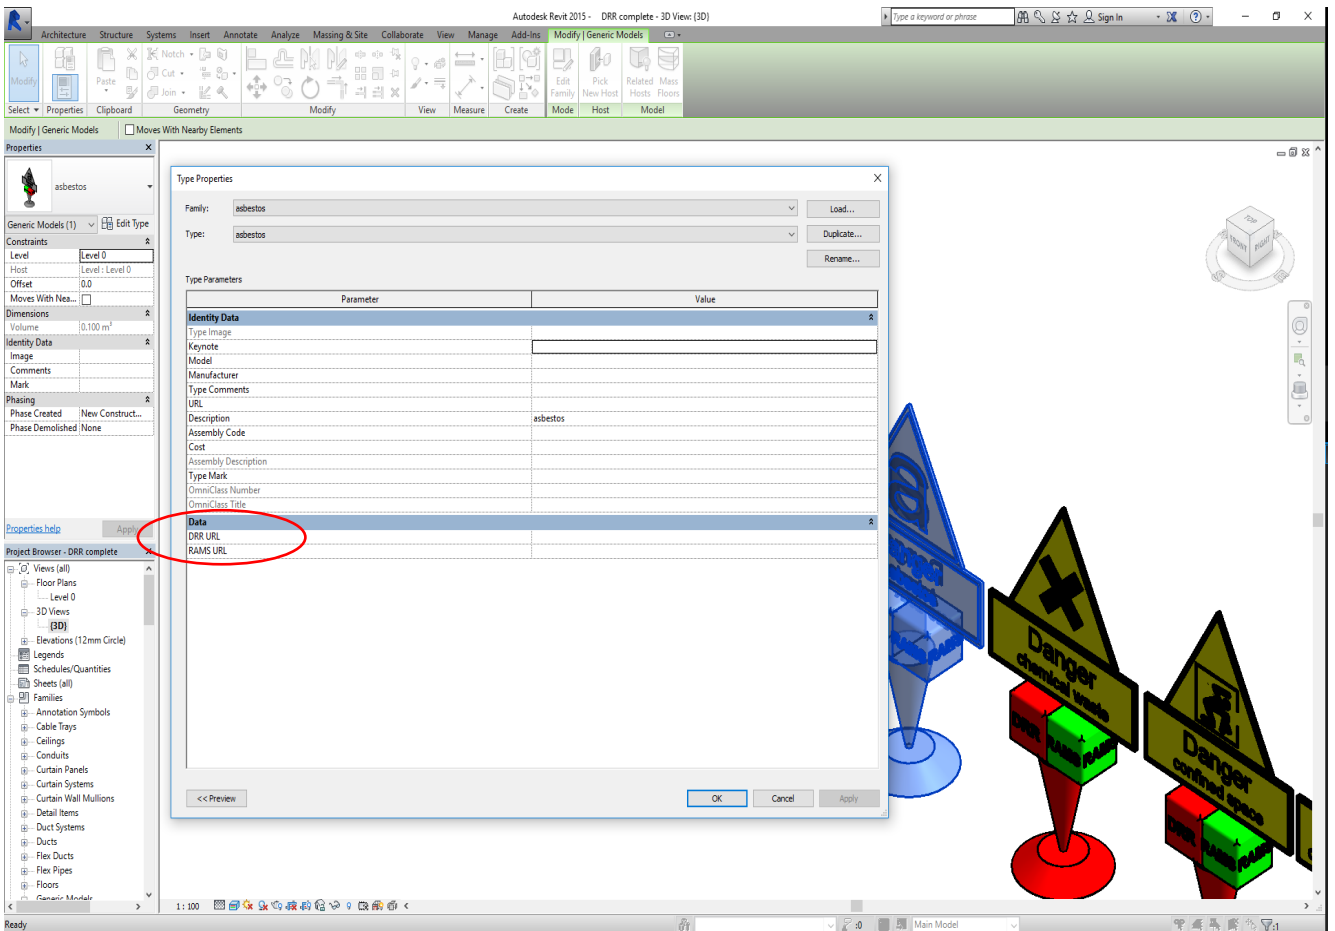

Place the family into your project and you're ready to go.

